





INSTALLATION INSTRUCTIONS

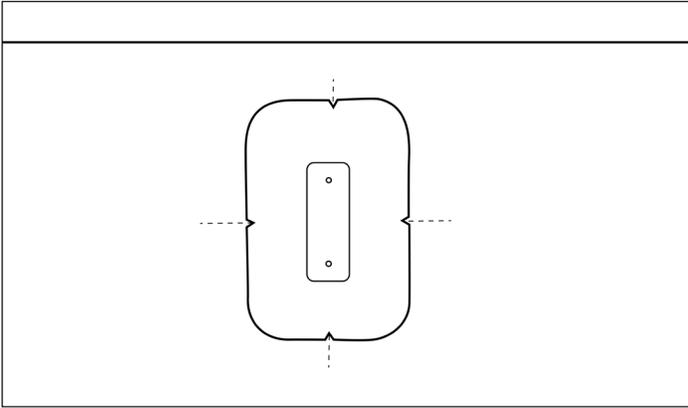


STEP 1

Align the U-Anchor on the parapet wall as per design requirement. Install the U-Anchor as per instructions provided by Anchor Products and in compliance with the roofing manufacturer

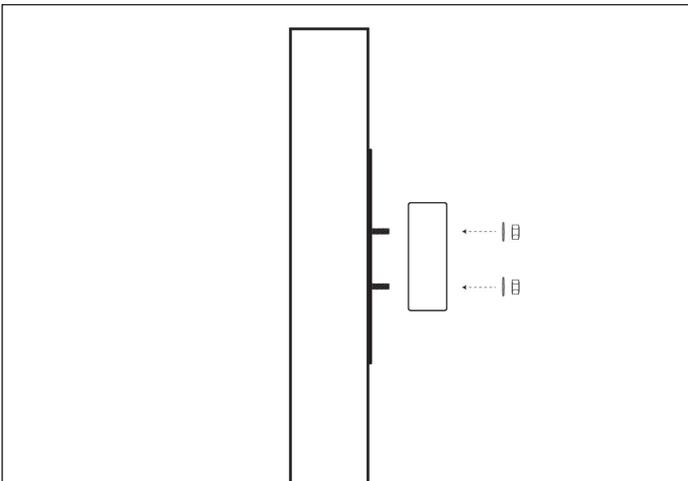


STEP 2

Attach the three sided strut bracket using the provided 3/8" flat washer and 3/8"-16 flanged nut. tighten to 20 ft/lb.

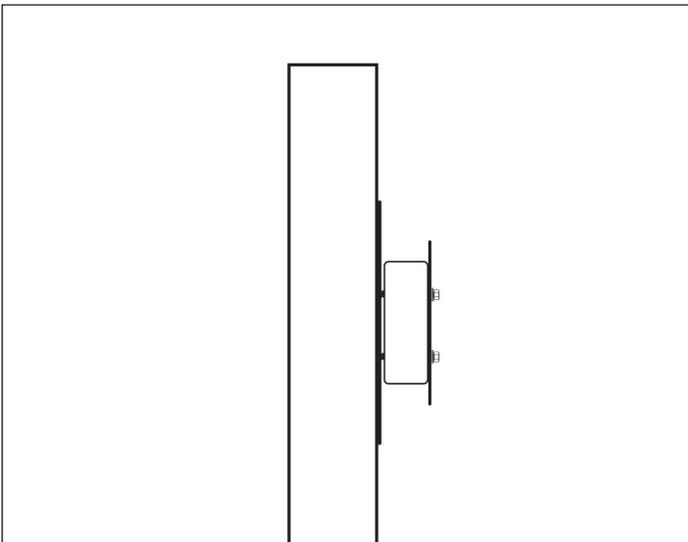

STEP 3

Secure the attachment plate to the three sided strut bracket using 3/8"-16 spring nuts and 3/8"-16 stainless steel flat head bolts.

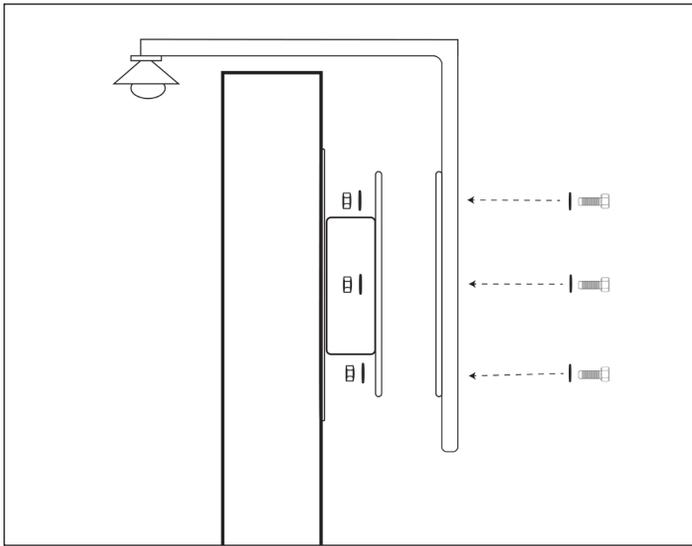

STEP 4

Secure the pre-assembled camera post and plate to the previously attached plate using a minimum of 3/8" flat washers on each side of the plate and 3/8"-16 nuts and 3/8"-16 bolts.