





INSTALLATION INSTRUCTIONS

Before getting started confirm the manner and location in which the 3/16" Stainless Steel Cable will connect to the equipment.

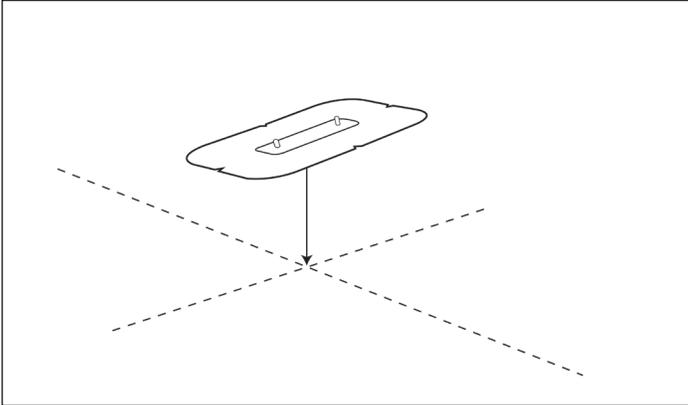


STEP 1

Install the U-Anchor as per instructions provided by Anchor Products and in compliance with the roofing manufacturer requirements. Make sure to follow any applicable pre-installation and post installation requirements according to the engineered design.

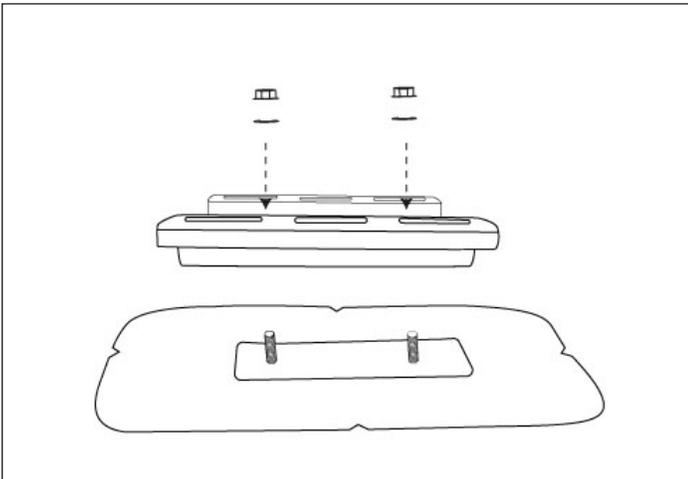

STEP 2


Secure the satellite dish mounting bracket over the U-Anchor using the 3/8" flat washers and 3/8"-16 stainless steel nuts and tighten to 20 ft-lbs. Most satellite bases will align without the satellite dish mounting bracket, if your dish base does not align with the slots on the bracket, see step 2a.

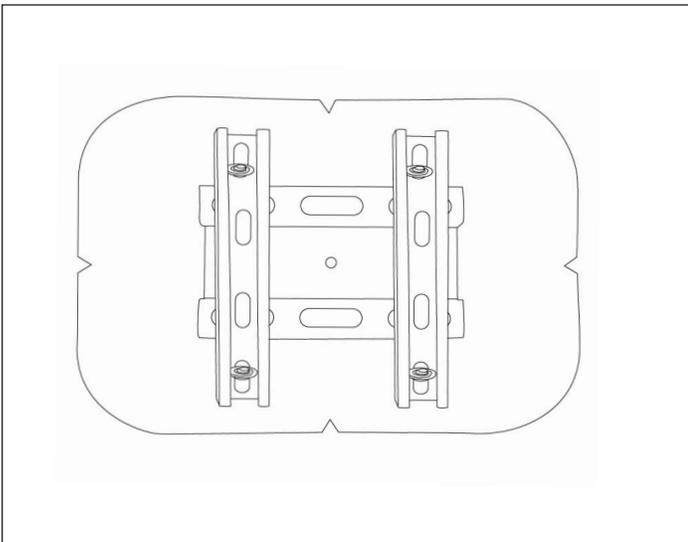

STEP 3

First, determine the proper spacing for the converting channel.

Secure the provided converting channels the satellite mounting bracket using 3/8"-16 channel nut and 3/8"-16 x 3/4" bolts. Tighten to 20 ft-lbs.

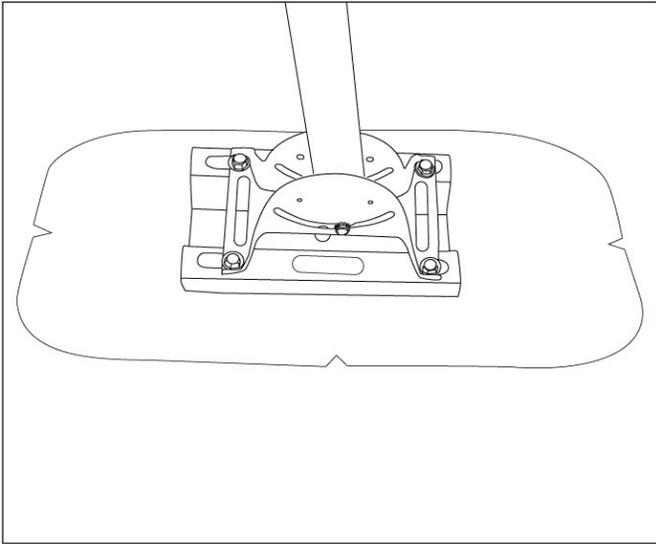

STEP 4

Secure the base of the dish to the converting channels using spring nuts and 3/8"-16 x 1/2" stainless steel bolts.