





INSTALLATION INSTRUCTIONS

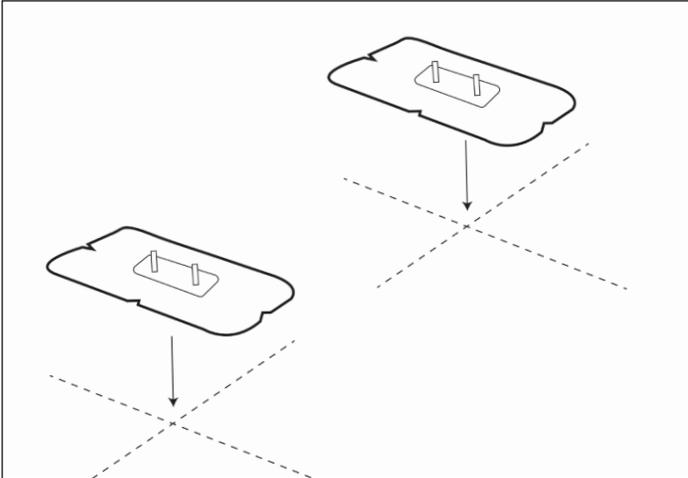


STEP 1

Align the U-Anchor as per design requirements. Install the U-Anchor as per instructions provided by Anchor Products and in compliance with the roofing manufacturer requirements. Make sure to follow any applicable pre-installation and post installation requirements according to the engineered design.

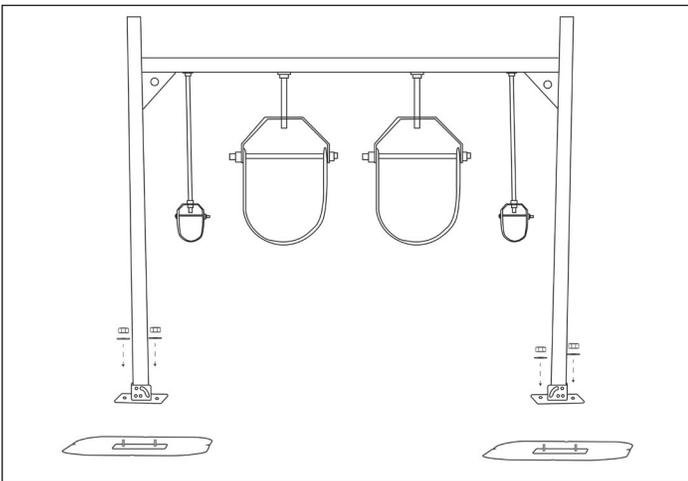

STEP 2

Place the pre-assembled **M.E.P Attached Frame** over the U-Anchor bolts and secure using the provided 3/8" flat washers and 3/8"-16 flange nut. Tighten to 20 ft-lbs.

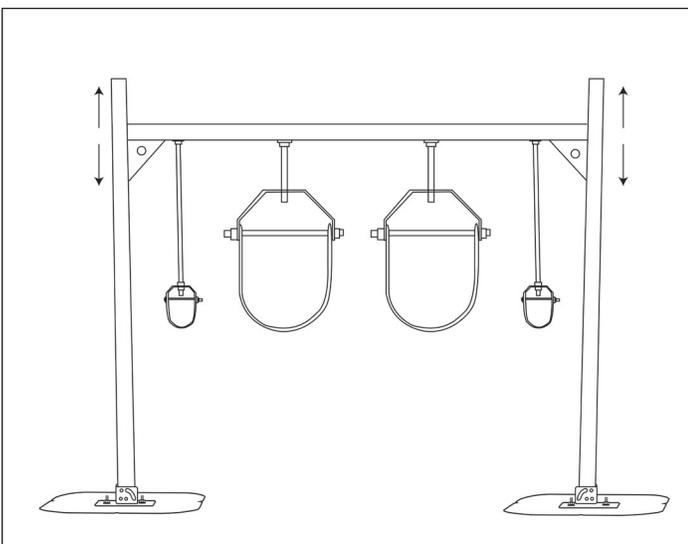

STEP 3

Make adjustments as necessary to ensure the top cross bar is level for the best system performance.

*Install all ancillary accessories as per design requirements.

