





INSTALLATION INSTRUCTIONS

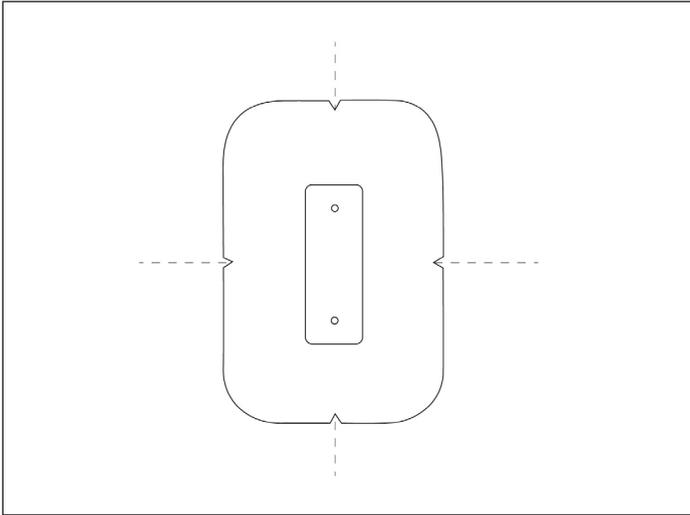


STEP 1

Align and install the U-Anchor™ as per instructions provided by Anchor Products and in compliance with the roofing manufacturer requirements. Make sure to follow any applicable pre-installation and post installation requirements according to the engineered design.

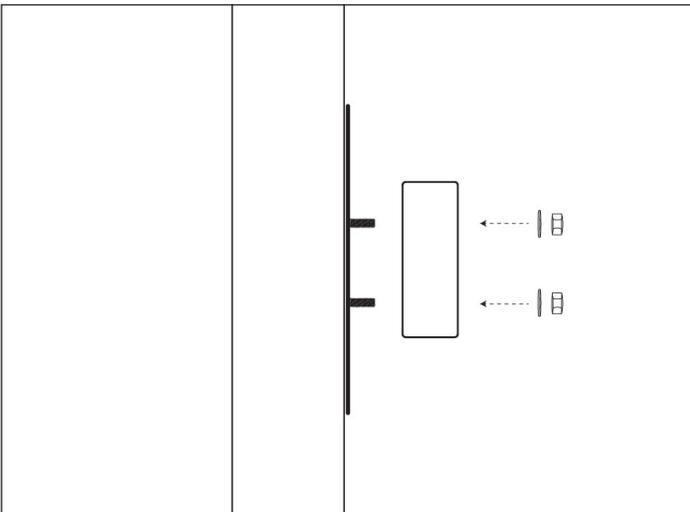

STEP 2

Place the strut over the U-Anchor bolts and secure with the provided stainless steel hardware.

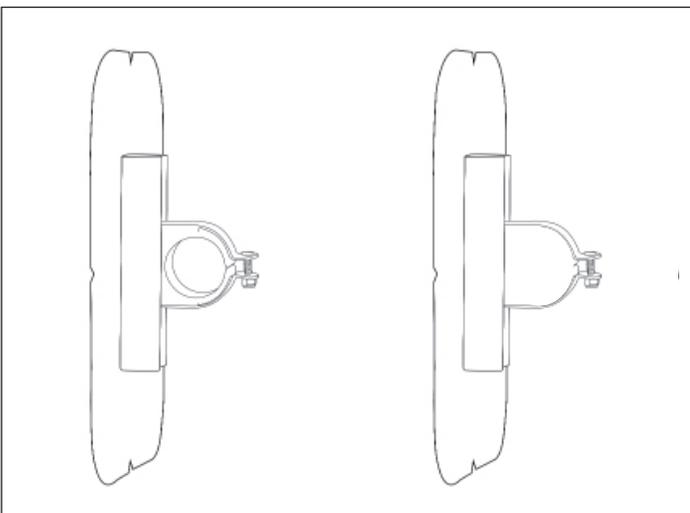

STEP 3

Secure the pipe or conduit to the strut using either a standar pipe clamp or a pipe clamp with cushion when expansion and contraction options are needed.