




**ANCHOR  
PRODUCTS™**  
Secured Mounting Solutions

**AP SOLUTION™ WSK 0520 | WEATHER STATION MOUNT**


## **INSTALLATION INSTRUCTIONS**

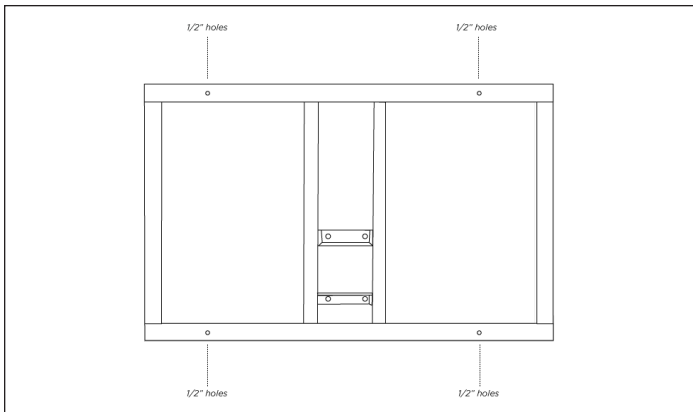

### **STEP 1**


Mark the location the U-Anchor bolt will penetrate the base frame, then drill 1/2" holes where identified on the base frame. Provided the frame is sufficient to all for a 1/2" hole.

*(These instructions apply if your weather station does not include a base frame.)*

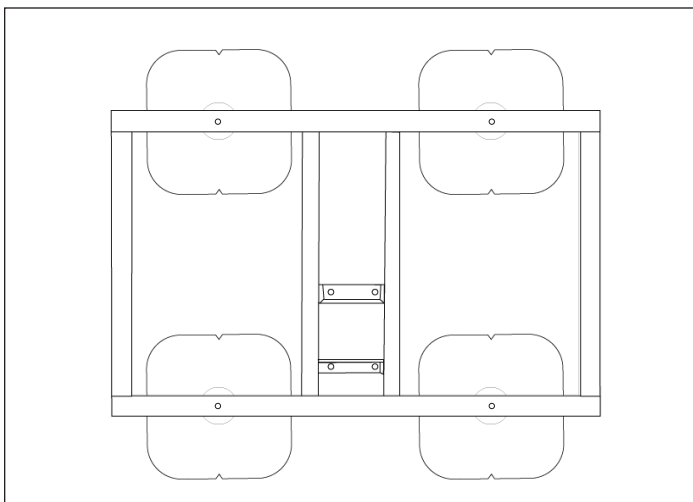


### **STEP 2**

Position the U-Anchors™ in accordance with each of the corresponding holes previously drilled into the base frame and loosely attach using the provided flat washer and flange nut.

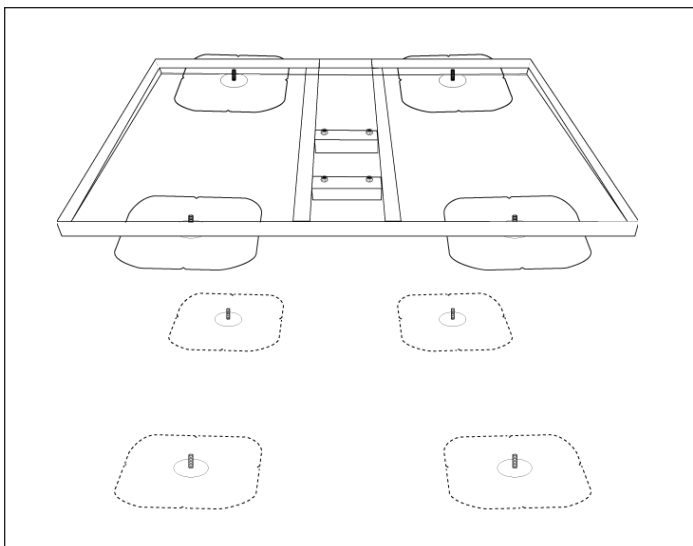


### **STEP 3**

Position the weather station as specified and mark the location and position of each U-Anchor in a manner appropriate for your roof.

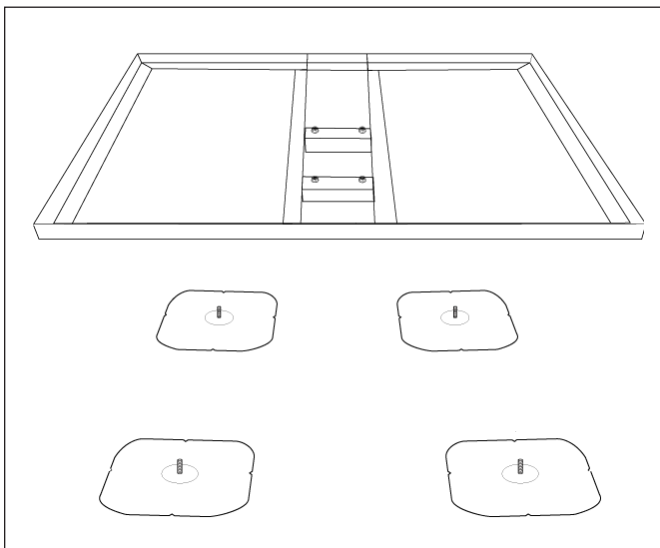

#### STEP 4


Detach the U-Anchors from the weather station and install the U-Anchor™ as per instructions provided by Anchor Products and in compliance with the roofing manufacturer requirements. Make sure to follow any applicable pre-installation and post installation requirements according to the engineered design.

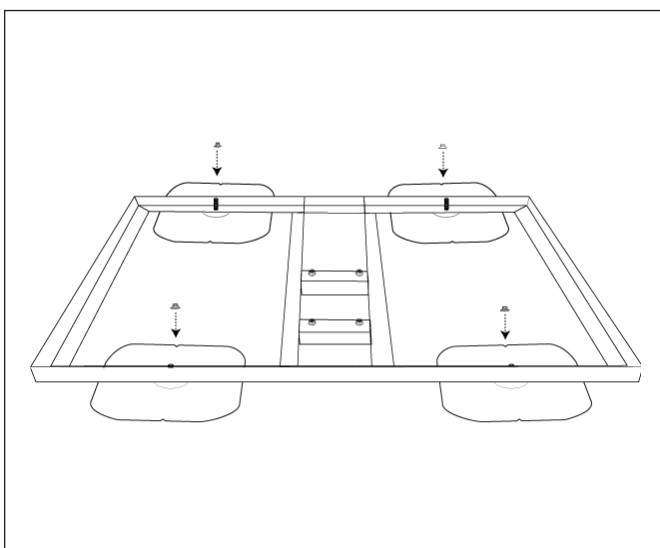

#### STEP 5

Reposition the base frame over the U-Anchor bolts and attach using provided hardware.

Continue installing all additional components following the weather station manufacturer requirements.

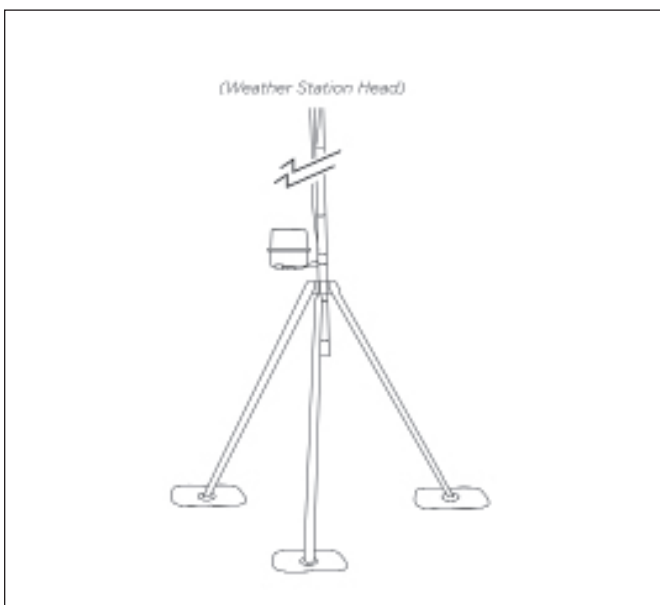

#### Additional Attachment Option

All installation instructions are the same as listed above.

*(These instructions apply if your weather station does not include a base frame.)*